

# Heated Cooler Line Flusher Adapters


**Domestic Adapters (40300266)**

- D1 - Universal 1/2" Female
- D2 - Universal 3/8" Female
- D3 - Universal 5/16" Male
- D4 - GM/Ford/Toyota (13 mm) 5/16" Female Threaded
- D5 - GM/Toyota/Dodge/Chrysler (15mm) 3/8" Female Threaded
- D6 - Dodge/Chrysler 5/16" Male Threaded
- D7 - Dodge/Chrysler 3/8" Male Threaded



**Banjo Adapters (40300278)**

- B1 - 12 mm Fittings for Banjo-Style Cooler Lines
- B2 - 14 mm Fittings for Banjo-Style Cooler Lines

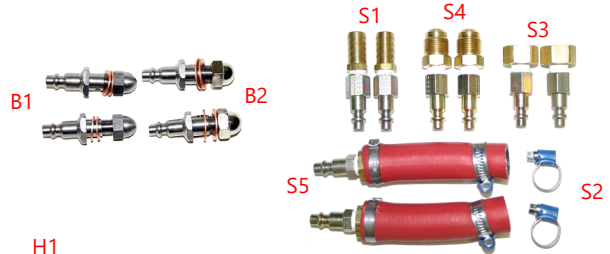

**Early Super Duty Adapters (40300268)**

- S1 - Universal 1/2" Male Ford/Dodge/ Chrysler/GM
- S2 - 1/2" Hose Clamps
- S3 - 1/2" Female Ford/Dodge/Jaguar/Early Super Duty/Allison
- S4 - 1/2" Male Ford/Dodge 518/47RE/48RE
- S5 - Universal Allison/Ford/Dodge Truck with Steel Lines



**Honda Adapters (40300271)**

- H1 - Honda Banjo Fitting (used with Honda Transmission Cooler Bolt)
- H2 - Honda Transmission Flexible Cooler Line Push In Fitting
- H3 - Honda Universal Transmission Cooler Line for Steel Lines




**Push On Adapters**

- 40200516** - P1 - 12 mm
- 40200517** - P2 - 11 mm Dodge/Chrysler/TF Early Push On
- 40200518** - P3 - 16 mm (was 17 mm) Ford 500/Taurus/AWF21-B Push On
- 40200519** - P4 - 19 mm Ford Late Model Navigator/Explorer/F-150/F-250 and 6R140/6R80/6R60/6R75/6HP26



**Toyota/Lexus Adapters**

- 40200611** - P5 - A760 (2007 GS350 ALL) A760H (2006 1S250 AWD, 2006 GS300 AWD, 2007/8 GS350 AWD) A760E (2006 1S350, 2007/8 GS350)
- 40200612** - P5-A - AB60E/F (2007 Tundra, 2008 Sequoia) AB60F (2008 Land Cruiser, 2008 LX570)
- 40200613** - P5-B - A960E (2006 IS250, 2006 GS300)
- 40200614** - P5-C - A750E/F (2007/9 Tundra, 2008 Sequoia)
- 40200615** - P5-D - A760E/F (2010 Tundra, 2010 Sequoia) A760F (2010 GX460)

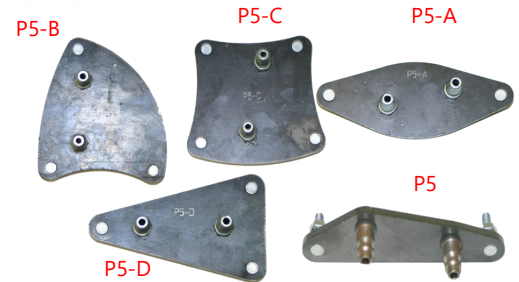

**Honda/Acura Adapter**

- 40200520** - P6 - Acura (TL) & Accord (A/T)



**GMC Acadia Adapter**

- 40200593** - P7 - 6T75 & 6F55 Transmissions (Acadia, Lincoln MKS and MKT, Ford Taurus SHO, Edge and Flex, etc.)

**Audi/VW/Nissan Adapter**

- 40200521** - AVWN - Audi MU4; VW 01M, 01P, & 01N; Nissan KTM, KT4



**Round VW Adapter**

- 40200649** - RVW - Primarily Volkswagen (e.g. JF56E & 09M) but also used for some Jaguar, Land Rover, and Mazda

**Ford Adapter**

- 40100039** - Explorer, Taurus, Escape, Flex, and Edge



These are the applications that these adapters are known to fit. There may be more. If the adapter you are attempting to use fits securely and tightly without any leaks, feel free to use that fitting. **Part Numbers are in Bold.** Other numbers are for identification purposes only. The Domestic, Banjo, Honda and Early Super Duty Adapters can be ordered in a kit only. Supersedes all previous information ~ Nov 2019